

PLOW PARTS	
PS12	12" PLOW POINT
PS14	14" PLOW POINT
PS16	16" PLOW POINT
PP1	SHEAR PIN 5/16 X 2 1/2 W/ NUT(GR 2)
BB21	BACK BRACE 21 1/2"
AFL	A FRAME (LEFT)
AFR	A FRAME (RIGHT)
PDB1	PLOW DRAWBAR
1X8X7BOLT	1X 8 X 7 BOLT (TOP BOLT) 2 REQUIRED
5/8 X 2	A FRAME BOLT & BACK BRACE BOLT WITH NUT & WASHER
5/8-11 X 4	A FRAME SPACER BOLT W/ WASHER & NUT FOR THE AFS1
3/4 X 3	BOLT W/ WASHER & NUT (BOLTS TO FRAME)
7/16 X 1 1/2	PLOW BOLT WITH NUT BOLTS BLADE TO MO BOARD

PASTURE RENOVATOR PARTS	
LS7	RIPPER PIN
LS6	COMPLETE RIPPER
AF100	A FRAME UPRIGHTFORLARGE D FRAME & B700
AFS1	A FRAME SPACER
BB29	29 1/2" BACK BRACE
CLIP	CLIP FOR RIPPER PIN
5/8 -11 X 5	A FRAME BOLT W/ NUT
5/8-11 X 2	BACK BRACE BOLT W/ WASHER & NUT